



Web-Site..... www.dnh.no

DSP-15EExmN(T)


<u>ENGLAND</u> **DNH WW Ltd**


Phone...... + 44 1908 275 000 Fax..... + 44 1908 275 100 E-mail........dnh@dnh.co.uk

GERMANY DNH GmbH

<u>USA</u> **DNH Speakers Inc**

Phone......+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

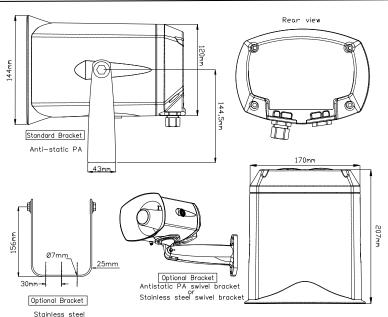

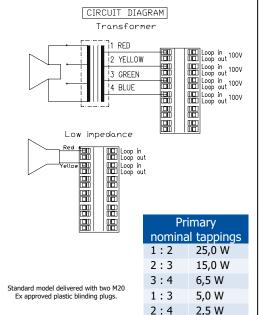

1:4

1,5 W

Ex marking:

II 2G Ex db eb mb IIB+H₂ / IIC T4 Gb (Zone 1)

II 2D Ex tb IIIC T105°C Db (Zone 21)

Sound pressure levels at 1W/1m RAV67 SPL vs Freq

Certified:

IECEx, ATEX, Inmetro, EAC, CCC, UL/CSA, BV,UKEX, + Contact Sales for requested certificates and marking for product.

Specifications	IIB	IIC
Material / Color	Anti-static PA / Black	
Mounting	Bracket	
Termination	e-chamber, push terminals	
Weight w/transformer	2,2 kg	
IP-rating	66 / 67	
Max. / min. amb. temp	60°C / -50°C	
Rated / max. power	25 W / 30 W	
SPL 1W/1m	106 dB	102 dB
SPL rated power	118 dB	114 dB
Effective freq. range	380 - 8000 Hz	450-7000
Dispersion (-6dB) 1kHz / 4kHz	120° / 37°	105° / 35°
Directivity factor,Q 1kHz/4kHz	4,5 / 9,6	
Options	Impedances, labels, transformers, maintenance free (MF), cables, bracket	

Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through the cable gland and connect to terminal with required tapping.
- Every time the back lid is removed, check that the gasket is fitted correctly to the lid before you refit the back lid. Do not use any lubricants on the gasket.
- Screw lid back into place by four screws with a torque of 1,8Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U-bracket (by loosening / tightening the screws) as required.
- Use only IECEx/ATEX certified "Ex eb" cable glands and blanking plugs reflecting the same IP rating and temperature range as the loudspeaker.
- Standard model delivered with two M20 Ex approved plastic blanking plugs.
- DSP-15EExmN(T) can be supplied with three different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.