


INSTALLATION INSTRUCTIONS


SE-22 SENSOR

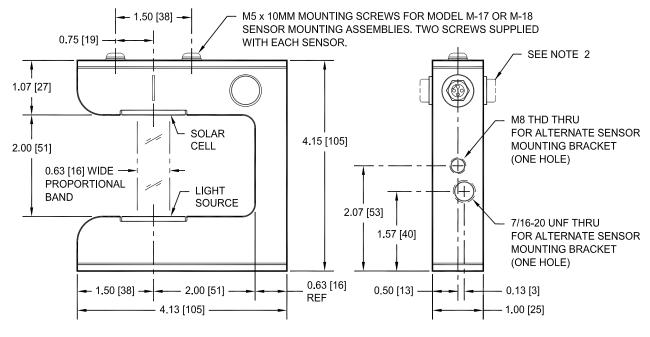

General information

NOTES:

- 1) All dimensions in brackets are millimeters [mm].
- 2) The standard position of the receptacle is on the rear of the sensor at the solar cell end as shown in the illustration above. It can be moved to either side of the sensor as follows:
 - (a) Remove the sensor cover plate and gasket adjacent to the receptacle.
 - (b) Remove the hole plug from the position where receptacle is to be placed.
 - (c) Unscrew the receptacle while holding the retaining nut on the inside of the sensor body.

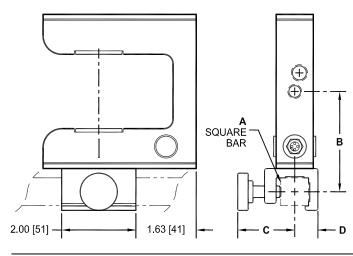

(d) Move receptacle to desired location, refasten the receptacle, and reassemble the sensor.

SPECIFICATIONS:

Product Weights	
SE-22 Sensor	10 oz (281 g)
With M–17 Sensor Mounting	13 oz (368 g)
With M–18 Sensor Mounting	14 oz (397 g)
With M–1935 Sensor Mounting	64 oz (1825 g)
Maximum Operating Ambient Temperature	140° F (60° C)
Voltage Required for Operation	10 to 15 VDC


 Table 1

 SE-22 WITH OPTIONAL M-17

 OR M-18 SENSOR MOUNTING

SENSOR	SQUARE BAR					
MOUNTING	A SIZE	MAXIMUM LENGTH	В	С	D	
M-17	0.75 [19]	60.00 [1524]	2.69 [68]	1.50 [38]	0.63 [16]	
M-18	1.00 [25]	86.00 [2184]	2.82 [71]	2.00 [51]	0.75 [19]	

INSTALLATION INSTRUCTIONS

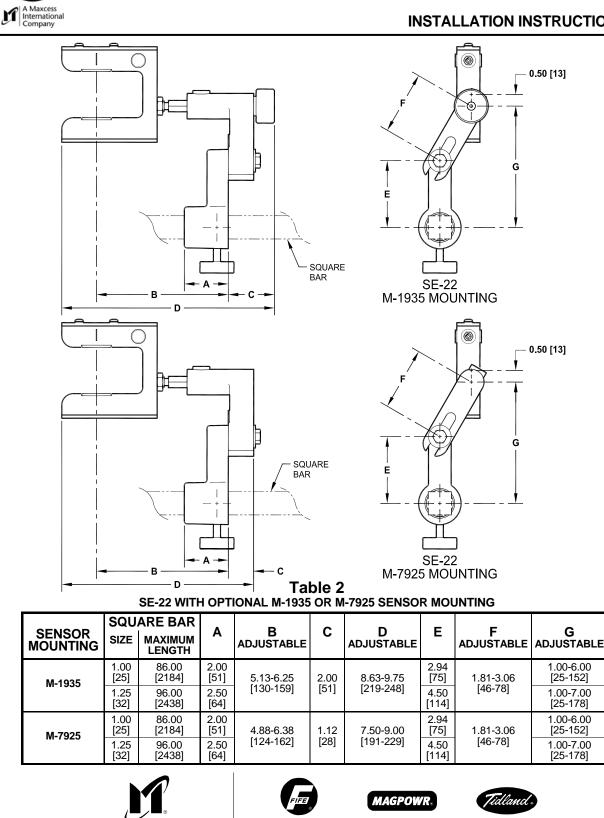



GUIDING · INSPECTION TENSION CONTROL FIFE CORPORATION

SLITTING · WINDING

© 2007 Fife Corporation. All rights reserved.